

Operating Instructions:

Warning: Do not remove the LED controller (small white box) from the system and attempt to operate. Doing so will damage your ArtTrack.

- Remote control is powered by an included CR2032 battery. Your light may not function properly and may not turn on/off when the battery needs to be replaced.

Power On/Off and Changing Modes:

- All features of your new ArtTrack will be accessed through the included remote.
- To turn your light on/off, press red button on top left of remote control. *Fig. A*
- This fixture has variable light output than can be selected via the “-” and “+” buttons. There are also shortcuts for 100%, 80%, 60%, 40%, 20%, and 10% outputs. *Fig. B*

Automatic Timer Instructions:

 
- Use the Auto Off buttons (OFF IN 3hr / 6hr / 9hr) to set your fixture to turn off after the described duration. The light will not automatically turn back on. *Fig. C*
- Use the Auto On buttons (AUTO START 3hr / 6hr / 9hr) to set your fixture to turn on for the described duration at the current time each day. Selecting a new Auto On Timer button will overwrite an existing timer selection. *Fig. D*
- To disable the Auto On timer, hold the red Off button until the fixture blinks three times. This is the ONLY way to disable the Auto On timer.
- You can use the Off timer buttons (OFF IN 3hr / 6hr / 9hr) or quick-press the red Off button to turn off the fixture without impacting the Auto On timer. You can also use the red On button at any point without impacting the Auto On timer. The light will continue to turn on at the same time each day until the Auto On Timer is disabled.

Programming Remote Control to Operate Additional Lights:

1. Unplug the power to the LED controller (small white box) for 5 seconds.
2. Reconnect power then immediately press and hold the 100% and 60% buttons simultaneously for 1 second.
3. When successfully paired, the light will flash three times.
4. Repeat the process as necessary to program the remote to additional lights.

Light Head Adjustment:

- Once mounted, the light heads can be pivoted to better align light output to your artwork. *Fig. E*
- We recommend aligning the light heads so the beam begins at the top of the artwork.
- Lights should be approximately 20” apart (between lights) for the Standard model, and 10” - 12” apart for the Tall model.

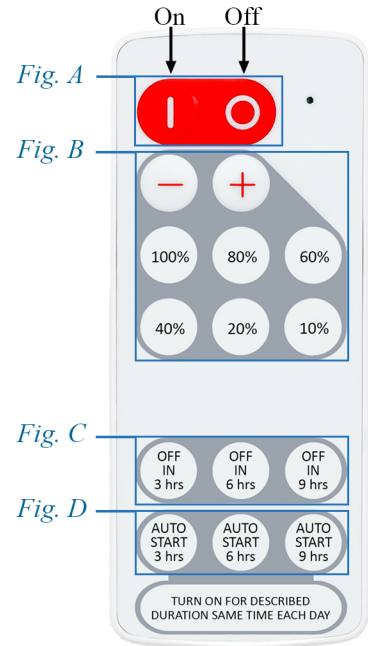



Installation Instructions:

***Test fixture prior to installation to ensure function and outlet compatibility.**

  Tools required: Screwdriver or drill and measuring device

Track Mount:

1. Remove artwork from wall.
2. Center Track/s on top of artwork with the mounting holes showing on the back of the artwork. *Fig. F*
3. Attach Track/s to the frame/canvas using the included short black screws. Ensure screws will not protrude through artwork once Track is attached.
4. Carefully guide the Mount into the Track. *Fig. G*
5. Adjust lights through the Track as necessary to ensure even coverage of light on artwork. Light heads should be approximately 20” apart for the Standard model, and 10” apart for the Tall model.
6. Connect the included power supply to the LED controller (small white box) coming from the light. If the power supply is not long enough to reach an outlet, attach the included extension cord.
7. Replace artwork and adjust light placement as necessary.
8. Black junction box attached to white LED Controller will become **warm** in operation. Avoid direct contact with artwork or other delicate mediums.

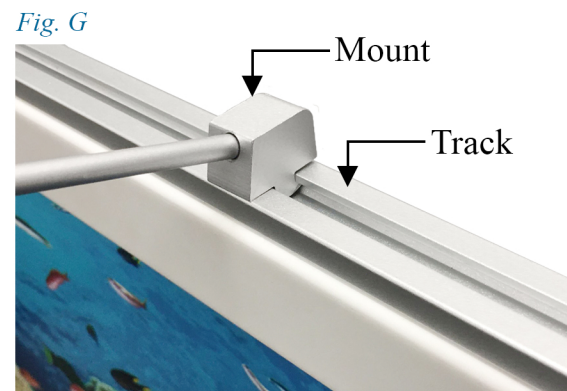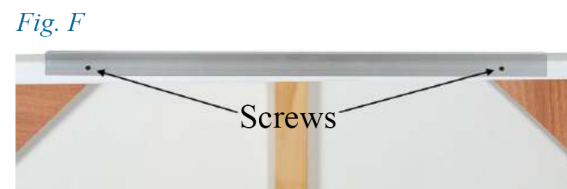

SEE REVERSE SIDE FOR OTHER MOUNTING OPTION

Single Light with Bracket:

1. Remove artwork from wall.
2. Center Bracket on top of artwork with the mounting hole showing on the back of the artwork. *Fig. H*
3. Attach Bracket to the frame/canvas using the included screw. Ensure screw will not protrude through artwork once Bracket is attached.
4. Carefully guide the Mount into the Bracket. *Fig. I*
5. Connect the included power supply to the LED controller (small white box) coming from the light. If the power supply is not long enough to reach an outlet, attach the included extension cord.
7. Replace artwork and adjust light placement as necessary.
8. Black junction box attached to white LED Controller will become **warm** in operation. Avoid direct contact with artwork or other delicate mediums.

Fig. H


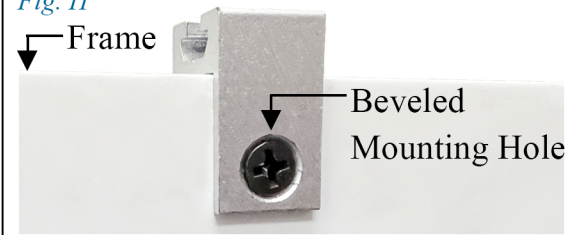 


Fig. I

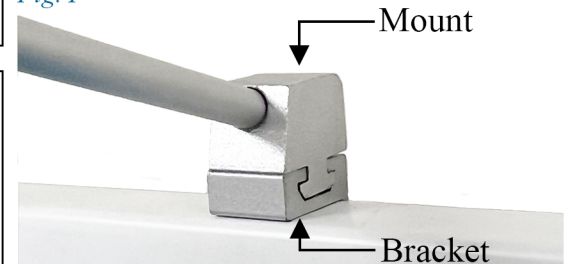 

Wall Mount:

This system was not designed for nor is recommended for a wall mount installation. If you choose to wall mount this system, the following are necessary precautions to take.

*Note: The use of the individual Brackets poses fewer complications than the Track.

Bracket Mounting:

- The light Mount should be inserted in the Brackets prior to snugging the screw. Tightening the screw before inserting the light into the Brackets will prevent fitment.
- Avoid excessively tightening the Bracket to the wall as doing so will pinch the wire exiting the light against the wall.

Track Mounting:

- We do not recommend placing the wires from the lights between the Track and the wall as tightening the Track could cut the wires when pressed between the wall and Track. It is important the wires instead be kept in front of the Track.
- The Track should be left loose until the lights are slid to their final locations. Avoid excessively tightening the Track to the wall as doing so will pinch the wire exiting the light against the wall.

OPERATING WARNINGS:

- Clean light fixture using a soft, dry cloth. Never use chemicals on or near your light fixture.
- Black junction box attached to white LED Controller will become **warm** in operation. Avoid direct contact with artwork or other delicate mediums.
- **AVOID EYE INJURY** - Do not stare directly into beam or shine it directly into anyone's face.
- Never connect the light to any item other than the included power supply. Doing so may damage the product and void your warranty, and could possibly result in fire, electric shock, or other bodily injury.
- Use in a dry and safe location. Our products are meant for indoor and dry locations only.
- Inspect your light carefully before use. Product can become damaged in shipping. Contact us if you have any of the following signs of a defective product: cuts or damage to electrical cord, damage to light head, or signs of damage on any part of the product.

PRECAUTIONS:

- Never try to disassemble, repair, or modify the power supply or this light. Electric shock may result. Contact us for warranty and repairs.
- If the plug will not fit into the available outlet, have a proper outlet installed by a qualified electrician. Trying to plug into an improper outlet can result in shock.
- Never allow liquids to spill on the power supply or the light and do not connect outdoors, as the unit is not waterproof. Exposure to rain or other liquid could result in fire or electric shock.
- Never use a power supply with a damaged or worn power cord or plug. This could result in electric shock, burns, or fire. Contact us to obtain a replacement.

PROTECTION OF CHILDREN:

- This product is not designed, intended, or recommended for children.
- Never allow children to play with or otherwise handle or operate the light, its remote control, power supply, extension cord, or packaging, as injury to themselves or others could result.
- Keep all mounting accessories and components out of the reach of small children. Small parts, in particular, may present a choking hazard to children.
- Immediately dispose of used batteries and keep away from children. Do NOT dispose of batteries in household trash. Even used batteries may cause severe injury or death. Call a local poison control center for treatment information.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

