

Operating Instructions:

- Remote control is powered by an included CR2032 battery. Your light may not function properly and may not turn on/off when the battery needs replacing.

Power On/Off and Changing Modes:

- All features of your new light will be accessed through the included remote.
- To turn your light on/off, press red button on top left of remote control. *Fig. A*
- This fixture has variable brightness that can be selected via the “-” and “+” buttons or the shortcuts for 100%, 80%, 60%, 40%, 20%, and 10%. *Fig. B*

Automatic Timer Instructions:

- Use the Auto Off buttons (OFF IN 3hr / 6hr / 9hr) to set your fixture to turn off after the selected duration. The light will not automatically turn back on. *Fig. C*
- Use the Auto On buttons (AUTO START 3hr / 6hr / 9hr) to set your fixture to turn on for the described duration at the current time each day. Selecting a new Auto On Timer button will overwrite an existing timer selection. *Fig. D*
- To disable the Auto On timer, hold the red Off button until the fixture blinks three times. This is the ONLY way to disable the Auto On timer.
- You can use the Off timer buttons (OFF IN 3hr / 6hr / 9hr) or quick-press the red Off button to turn off the fixture without impacting the Auto On timer. You can also use the red On button at any point without impacting the Auto On timer. The light will continue to turn on at the same time each day until the Auto On Timer is disabled.

Programming Remote Control to Operate Additional Lights:

1. Unplug the power to the LED controller (small white box) for 5 seconds.
2. Reconnect power then immediately press and hold the 100% and 60% buttons simultaneously for 1 second.
3. When successfully paired, the light will flash three times.
4. Repeat the process as necessary to program the remote to additional lights.

Body Adjustment:

- Once mounted, the body of the light can be pivoted to better align the light output to your artwork. *Fig. E*
- We recommend adjusting the body of the fixture so that the beam of light begins at the top of your artwork (not the frame).

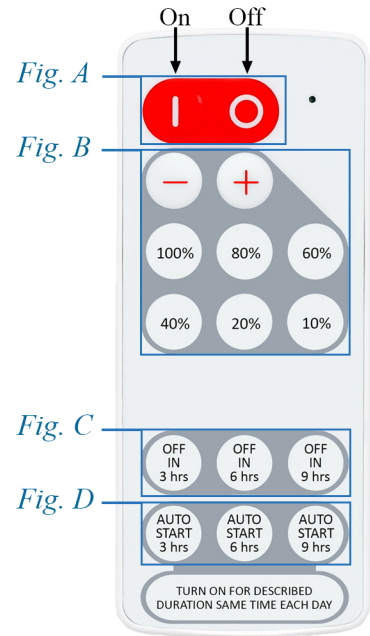 


Fig. E



Fig. F

Installation Instructions:

***Test fixture prior to installation to ensure function and outlet compatibility.**

Tools required: Screwdriver, drill (optional for frame mount), pencil.

Wall Mount (recommended):

1. Using a pencil, mark your wall at center and top of your artwork. *Fig. F*
2. Remove artwork from wall.
3. Placed the supplied mounting block ½” - 1” below the mark from Step 1.
4. Using the mounting block as a template, mark the position of the two through-holes.
5. Drill through the two holes using a 3/16” bit.
6. Place a dry wall anchor (included) in each hole then attach the mounting bracket with the two long silver screws provided.
7. Gently guide the neck into the slot of the mounting bracket and tighten with the included allen wrench. Height of the light is subjective and should be adjusted as desired. Raising the light can help eliminate glare. *Fig. G*
8. Connect the LED Controller (included with remote) to the light, and connect the power supply to the LED Controller. An extension cord is included; use if needed. Use remote to dim as desired. Reattach artwork to wall and enjoy!



Fig. G



Installation Instructions (continued):

***Test fixture prior to installation to ensure function and outlet compatibility.**

Fig. H

Tools required: Screwdriver, drill (optional for frame mount), pencil.

Frame Mount:

1. Remove artwork from wall.
2. Locate, then mark top center of frame.
3. Attach supplied mounting block to frame using the two short black screws approximately ½” - 1” below the top of the frame. Drilling a pilot hole is recommended but may not be required. Take care that once the screw is installed, it will not protrude through the frame or artwork. *Note: exact placement will vary based frame size, shape, and personal preference. *Fig. H*
4. Gently guide the neck into the slot of the mounting bracket and tighten with the included allen wrench. Height of the light is subjective and should be adjusted as desired. Raising the light can help reduce glare. *Fig. I*
5. Connect the LED Controller (included with remote) to the light, and connect the power supply to the LED Controller. An extension cord is included; use if needed. Use remote to dim as desired. Reattach artwork to wall and enjoy!

 
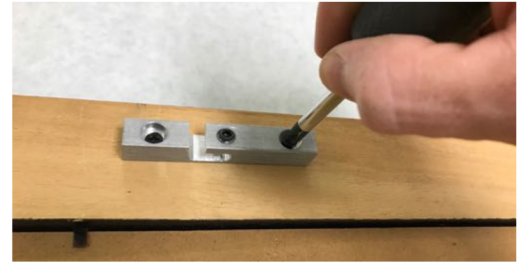 


Fig. I

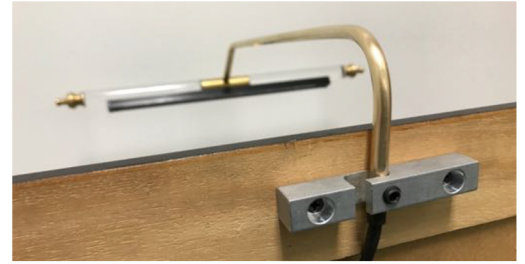

OPERATING WARNINGS:

- Clean light fixture using a soft, dry cloth. Never use chemicals on or near your light fixture.
- **AVOID EYE INJURY** - Do not stare directly into beam or shine it directly into anyone’s face.
- Never connect the light to any item other than the included power supply. Doing so may damage the product and void your warranty, and could possibly result in fire, electric shock, or other bodily injury.
- Use in a dry and safe location. Our products are meant for indoor and dry locations only.
- Inspect your light carefully before use. Product can become damaged in shipping. Contact us if you have any of the following signs of a defective product: cuts or damage to electrical cord, damage to light head, or signs of damage on any part of the product.

PRECAUTIONS:

- Never try to disassemble, repair, or modify the power supply or this light. Electric shock may result. Contact us for warranty and repairs.
- If the plug will not fit into the available outlet, have a proper outlet installed by a qualified electrician. Trying to plug into an improper outlet can result in shock.
- Never allow liquids to spill on the power supply or the light and do not connect outdoors, as the unit is not waterproof. Exposure to rain or other liquid could result in fire or electric shock.
- Never use a power supply with a damaged or worn power cord or plug. This could result in electric shock, burns, or fire. Contact us to obtain a replacement.

PROTECTION OF CHILDREN:

- This product is not designed, intended, or recommended for children.
- Never allow children to play with, or otherwise handle or operate, the light, its remote control, power supply, extension cord, or packaging, as injury to themselves or others could result.
- Keep all mounting accessories and components out of the reach of small children. Small parts, in particular, might present a choking hazard to children.
- Immediately dispose of used batteries and keep away from children. Do NOT dispose of batteries in household trash. Even used batteries may cause severe injury or death. Call a local poison control center for treatment information.

⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.

