

*** For best long-term performance, please fully charge light at least once every 3 - 4 months.**

Operating Instructions:

Power On/Off and Changing Modes:

- Locate button on side of light.
- Press and release button to turn the light on.
- While the light is on, pressing and releasing the button subsequent times will cycle through the low, medium, and high settings.
- Once the light has been on a setting for 10 seconds, it will record the setting to memory and this will be the default setting next time you use the light.
- To manually turn the light off, hold the button for 1 second.
- The light will automatically turn itself off after approximately 5 hours.

Charging:

- Plug supplied charger into wall outlet and connect to your light via the DC jack.
- Red LED on the charger indicates its currently charging.
- Green LED or no LED indicates charger has completed its charge cycle.
- Light charges in approximately 4.5 hours or less.
- Unplugging the light from the charger will not harm it but for best performance please allow charger to complete its cycle.
- The light will turn itself off when it needs to be charged. If light fails to run for 5 hours, connect to charger.
- For best performance, please charge your light before first use.


Attaching Light to Mount:


- Your Rechargeable Art Light connects to the mount via a series of magnets located on the underside of the mount.
- These magnets must connect to the silver strike plate located on the center of the light. This is the only place the magnets will grab with sufficient force to hold your light.
- Gently move your light, with strike plate facing magnets, towards the light mount until the magnets grab the light. For best hold, make sure the light mount is centered on the strike plate.

Removing Light from Mount:

- Gently grab the light by one end and pull down (away from the mount) to break magnet contact.

Runtimes:

	Low	Medium	High
	50 hours	28 hours	16 hours

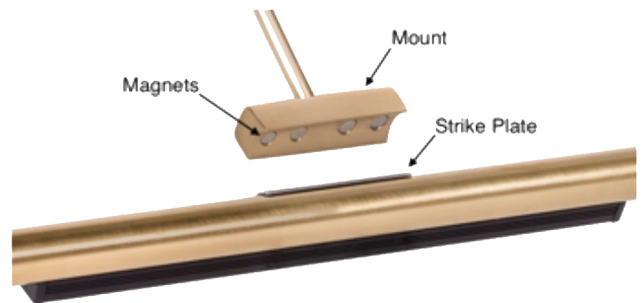

SEE REVERSE SIDE FOR FURTHER INSTRUCTION

Installation Instructions:

Tools required: Screwdriver, drill (optional for wall mount), hammer (optional), pencil.


Wall Mount (recommended)

1. Using a pencil, mark your wall at center and top of your artwork.
2. Remove artwork from wall.
3. Place the supplied mounting block $\frac{1}{2}$ " - 1" below the top of your mark from Step 1.
4. Using the mounting block as a template, mark the position of the two through-holes with a pencil or sharp object.
5. Drill the two holes using a $\frac{3}{16}$ " bit.
6. Place a dry wall anchor (included) in each hole then attach the mounting block with the two long silver screws provided.
7. Gently guide the neck through the mounting block and use the included hex key to tighten the set screw so there is 2" of vertical rod above the mount.
 *Note: 2" is a good estimate but the height of the neck is dependent on frame size and personal preference.
8. Adjusting neck higher will eliminate glare. Adjust as necessary.
9. Replace artwork and attach light per instructions on previous page.



Frame Mount (may be unstable when attaching and detaching light)

1. Remove artwork from wall.
2. Locate, then mark top center of frame.
3. Attach supplied mounting block to frame using the two short black screws approximately $\frac{1}{2}$ " - 1" below the top of the frame.
 *Note exact placement will vary based on frame size, shape, and personal preference. Make sure before fastening these screws to your frame that they remain above the artwork so as not to damage it.
4. Gently guide the neck through the mounting block and use the included hex key to tighten the set screw so there is 2" of vertical rod above the mount.
 *Note: 2" is a good estimate but the height of the neck is dependent on frame size and personal preference.
5. Adjusting neck higher will eliminate glare. Adjust as necessary.
6. Replace artwork and attach light per instructions on previous page.

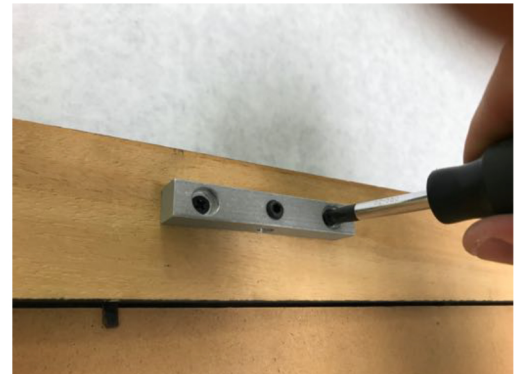

SEE FOLLOWING PAGE FOR PRODUCT PRECAUTIONS

OPERATING WARNINGS:

- **AVOID EYE INJURY** - Do not stare directly into beam or shine it directly into anyone's face. Doing so could cause retinal damage.
- Do not operate this light while attached to the charger. Doing so could result in damage to your light. Unplug your light from the charger before use.
- Never connect the light to any item other than the supplied charger. Doing so may damage the product and void your warranty, and could possibly result in fire, electric shock or other bodily injury.
- Use in a dry and safe location. Our products are meant for indoor and dry locations only.
- Inspect your light carefully before use. Product can become damaged in shipping. Contact us if you have any of the following signs of a defective product: cuts or damage to electrical cord, damage to light head, or signs of damage on any part of the product.

PRECAUTIONS:

- To avoid risk of damage to eyesight, never look directly into the beam when the light is on, nor shine it directly into another person's eyes.
- Any battery may rupture or explode if put in a fire or otherwise exposed to excessive heat. To avoid risk of injury, do not expose this light to fire or excessive heat.
- Never try to disassemble or repair the charger or this light. Electric shock may result. Contact us for warranty and repairs.
- Never alter the plug on your charger. If the plug will not fit into the available outlet, have a compatible outlet installed by a qualified electrician. Trying to plug into an improper outlet can result in shock.
- Any battery may leak harmful chemicals which may damage skin, clothing, or the inside of the light. To avoid risk of injury, do not let any material leaked from a battery come in contact with eyes or skin. In the event of skin contact, wash the affected area immediately and obtain prompt medical attention.
- Never allow liquids to spill on the charger or the light and do not charge outdoors, as the unit is not waterproof. Exposure to rain or other liquid could result in fire or electric shock.
- Do not charge or operate the light near flammable materials.
- Do not charge battery in gas-tight enclosures as gas may be emitted under certain conditions and can explode if concentrated and confined.
- Do not operate the light while connected to the charger.
- Never connect the light to any item other than the supplied charger. Doing so may damage the product and void your warranty, and could possibly result in fire, electric shock, or other bodily injury.
- Exposure of the light and accessories to excessively high temperatures above 122°F (50°C) can heat-damage plastic parts, electronic components and the batteries.
- Never store this light in temperatures below -4°F (-20°C). Doing so may damage the light's electronic components.
- Recharge the battery at temperatures: 32°F to 122°F (0°C to 50°C) to avoid hazardous gas venting from the battery cells and potentially reduced battery capacity.
- Never use a charger with a damaged or worn power cord or plug. This could result in electric shock, burns or fire. Contact us to obtain a replacement.
- Unplug the charger from the wall and light before attempting any cleaning in order to avoid the risk of electric shock.

PROTECTION OF CHILDREN:

- This product is not designed, intended or recommended for children.
- Never allow children to play with, or otherwise handle or operate, the light, its battery or charging apparatus, as injury to themselves or others could result.
- Keep all accessories and components out of the reach of small children. Small parts, in particular, might present a choking hazard to children.